

WASHERS

The stand pipe is located near the washer connection and is used to remove the water from the washing machine. It is recommended that a filter be used to catch debris before the water enters the stand pipe.